



SecureLinx Spider Duo Quick Start Guide

LANTRONIX®



SecureLinx Spider Duo Quick Start Guide

SecureLinx Spider Duo QUICK START GUIDE CONTENTS

Overview	2
What's In The Box.....	3
Installation and Network Settings.....	3-6
Spider Duo Web Configuration	7-9
Target Computer Setup.....	9-10
Client System Requirements	10
Connection to Target Computer and Basic Operation.....	11-12
Exit and Logout	13
Power Control Unit (PCU).....	13
Contact Information.....	15


OVERVIEW

SecureLinux Spider Duo

The SecureLinux Spider Duo™ is a distributed KVM/IP device designed to securely provide monitoring and control of one (target) computer system locally and by one or more remote users. The remote user (client) accesses the Spider Duo over a local or wide area network connection using a standard web browser.

There are two models: one with both PS/2 and USB keyboard/mouse interfaces (software selectable), and one for USB-only systems. The color coded plugs on the ends of the cables for the keyboard, mouse, USB port and video are designed to plug directly into the target system's corresponding connector. Hang the Spider Duo by the cables or secure it out of the way.

Typical Spider Duo Configuration

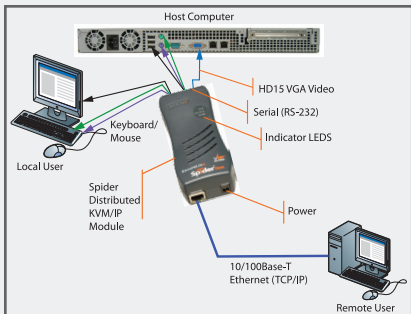

This Quick Start Guide will step you through the hardware installation and configuration in a typical environment.

WHAT'S IN THE BOX


In addition to the Spider Duo distributed KVM/IP module, the box contains the following items:

- Local KVM cable
- Computer input cable
- Mounting kit
- Quick Start Guide
- CD-ROM containing documentation and utilities
- External AC/DC Power Supply

Note: An optional power control unit is available (part number PCU100-01). See page 13 for details.

INSTALLATION AND NETWORK SETTINGS

Local port, computer input connectors, USB, Serial/ PCU CTRL port

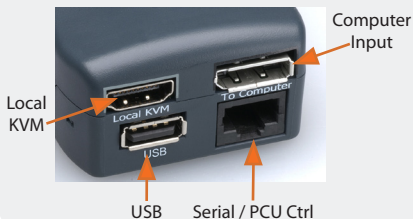


Serial RS-232 / PCU CTRL Pinouts

Pin #	Pin Name	
1	RTS	(Out)
2	+5V	(Out)
3	TX	(Out)
4	PCU Sense	(In)
5	GND	(Out)
6	RX	(In)
7	PCU Drive	(Out)
8	CTS	(In)

INSTALLATION AND NETWORK SETTINGS CONTINUED

Ethernet and Power Port

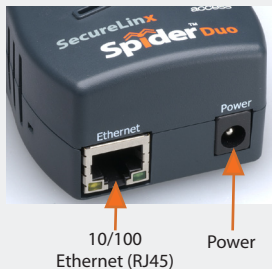

Spider Duo LED indicators

LEDs	Color	Description
ID	Amber	Optionally lit to assist in finding unit.
Sys OK	Blue	Blinks upon bootup. Steady when up and healthy
PCU	Green	Steady on when power is being supplied through PCU

INSTALLATION AND NETWORK SETTINGS CONTINUED

1. Plug the RJ45 end of the included serial cable into the Spider Duo's serial port. Plug the DB9F end into the serial (COM) port of a PC/laptop running a terminal emulation (e.g. HyperTerminal). The default serial port settings are 9600 bits per second, 8 data bits, no parity, 1 stop bit, no flow control. Plug the power adaptor into the Spider Duo's power connector.
2. Insert color coded plugs into connectors with matching border on the Spider Duo. Plug the Video, USB, and PS/2 keyboard/mouse (if applicable) cables into the target computer. For transparent local access, connect cables to local keyboard, video and mouse. The blue Sys OK LED will illuminate and flashes to indicate that it is booting up. Bootup is complete within approximately one minute. The blue LED stops flashing and remains illuminated.
3. Upon bootup, the terminal window displays the IP Configuration screen. At the command prompt type `config` and press Enter.
4. To change the default IP auto configuration from DHCP to a static IP address, at the IP autoconfiguration prompt type `none` and press Enter.

INSTALLATION AND NETWORK SETTINGS CONTINUED

```
Welcome!  
Choose a command for the following features:  
-Initial IP configuration: "config".  
-Reset device: "reset".  
[172.18.100.17 spider]>
```

5. Follow the prompts to enter the unit's IP address, subnet mask, default gateway, and LAN interface information.

```
[172.18.100.17 spider]> config  
IP autoconfiguration (none/dhcp/bootp) [dhcp]: none  
IP [172.18.100.17]:  
NetMask [255.255.0.0]:  
Gateway (0.0.0.0 for none) [172.18.0.1]:  
LAN interface speed (auto/10/100) [auto]:  
LAN interface duplex mode (auto/half/full) [auto]:  
Are the entered values correct? Enter y for Yes, n for No or c to Cancel y  
  
Configuring device ...
```

6. Press Enter, to accept the changes. The system takes about 20 seconds to complete. Press Enter once again at the prompt to display the updated IP address.
7. Plug an Ethernet cable connected to your network into the Ethernet port. The Link LED illuminates.

SPIDER DUO WEB CONFIGURATION

1. Access the Spider Duo over the network using a favorite web browser by entering `https://` for a secure SSL connection or `http://` for an insecure connection and its IP address in the address bar.
2. Enter your user name (default is **sysadmin**) and password (default is **PASS**) at the prompt. The Spider Duo home page displays.



SPIDER DUO WEB CONFIGURATION CONTINUED

3. The following are a few key configurations:

Keyboard/Mouse:

- a. Select **Interfaces**→**Keyboard/Mouse** from the web page.
- b. To change the target interface keyboard/mouse settings from the default (Auto) to force PS/2 or USB target interface, select the appropriate option from the Host Interface drop-down menu.
- c. To change the USB mouse type, select the appropriate operating system option from the USB Mouse Type drop-down menu.
- d. Click Save to store your settings in nonvolatile memory.

Security:

- a. Select **Services**→**Security** from the web page.
- b. To require SSL encryption, select Force HTTPS for Web access.
- c. Click Save to store your settings in nonvolatile memory.

Network TCP Ports and Services:

- a. Select **Interfaces** from the web page. The Network page displays.
- b. Under Network Miscellaneous Settings, modify the TCP ports as necessary. The client system requires the ability to access the Spider Duo's IP address as well as have port 80 (HTTP) and 443 (HTTPS) open. Consult your system administrator if your system's firewalls and NAT device requires reconfiguration or change to these values.

SPIDER DUO WEB CONFIGURATION CONTINUED

Performance:

- a. Select **Interfaces**→**KVM Console Settings** from the web page.
- b. If necessary, under Transmission Encoding, modify the video compression levels and color depth for slower connections.

TARGET COMPUTER SETUP

The Spider Duo recognizes several varieties of video display formats with resolutions up to 1600 x 1200 @ 60Hz. (Refer to the User Guide for a list of supported video formats).

Minimize bandwidth and power consumption by setting the target computer's video resolution to the minimum setting required for your remote monitoring application. The following video modes are recommended:

800 x 600 @ 60Hz
1024 x 768 @ 60Hz
1280 x 1024 @ 60Hz
1600 x 1200 @ 60Hz

1. On a Windows target system, select **Control Panel**→**Display**→**Settings**. Modify the screen resolution value as necessary.
2. Select **Control Panel**→**Display**→**Settings**→**Advanced**→**Monitor**. Modify the screen refresh rate (consult the appropriate documentation when using a typical video card or another operating system on the target computer).

TARGET COMPUTER SETUP CONTINUED



Use generic mouse drivers when using PS/2 mouse interface for optimum mouse control during remote sessions. Set the mouse pointer speed to a middle setting with no acceleration or snap-to effects.

3. On a Windows target system, select **Control Panel**→**Mouse**→**Pointer Options**, set the pointer speed to medium and disable Enhanced pointer precision. For Linux GUIs, set the mouse acceleration to exactly 1 and the threshold to exactly 1.


CLIENT SYSTEM REQUIREMENTS

The client system must have a web browser (such as Microsoft Internet Explorer, Mozilla Firefox, and Netscape Navigator) and a Java Virtual Machine (version 1.4 or higher) installed. Enable Java on the web browser.

CONNECTION TO TARGET COMPUTER CONTINUED

2. To operate within the remote target system, move your mouse along the screen to the Lantronix Spider Duo Remote Console window. The mouse will navigate along the remote target system's screen.
3. To optimize the picture, press the video adjustment icon  in the top menu bar.
4. To fit multiple remote console windows on the desktop, select **Options** → **Scaling** from the pull-down menu bar to decrease the remote console window's size.
5. If the local and remote cursors desynchronize, press the Sync  button. If the Sync button does not synchronize the cursors, select **Options** → **Mouse Handling** → **Intelligent Sync**.
6. To suppress the local cursor in the remote console window, select **Options** → **Mouse Handling** → **Mouse Mode** → **Single Mouse Mode** and click within the window. Restore the local cursor by pressing the left Alt key + F12.
7. To distinguish between the local and remote cursors while in the remote console window, select **Options** → **Local Cursor** and choose the appropriate cursor type.

EXIT AND LOGOUT

1. To exit the Lantronix Spider Duo Remote Console, click the  button to close the window.
2. To log out of the Spider Duo web page from the browser, click Logout.

POWER CONTROL UNIT (PCU)

The optional PCU can be used to remotely manage power of the target computer.




WHAT'S IN THE BOX

In addition to the PCU module, the box contains the following items:

- AC Power cord (input)
- AC Power cord IEC60320/C13 to IEC60320/C14 (output)
- Cable RJ45 to RJ45, CAT-5 (10 ft)

POWER CONTROL UNIT (PCU) - INSTALLATION

1. Connect power output plug to target PC.
2. Connect RJ45 cable from PCU to Spider Duo PCU CTRL port.
3. Connect power input plug to AC power.
Green LED = ACTIVE, Blue LED = CONNECTED

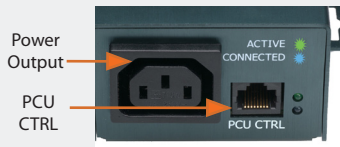

CONTACT INFORMATION

For questions and technical support, please check our online knowledge base at www.lantronix.com/support

Lantronix

15353 Barranca Parkway, Irvine, CA 92618, USA

Phone: (949) 453-3990 or Fax: (949) 453-3995

www.lantronix.com



www.lantronix.com